



SR868C8 setup

Please note these are basic keystroke details to setting up your system. For in-depth information, please consult your manual or call a Sky Power technician.

Setting the Timed Heating

Press **SET** 5 times through password.

DT 0 appears

Press **+**

DT F appears

Press **+**

tHet appears.

Press SET

tH1o appears (Heating Period 1 On) 04:00 default

Press SET - Hours will flash

adjust on time hours using + or -

Press SET - Minutes will flash

Adjust on time minutes using +or -

Press SET - Temperature will flash

Adjust Temperature using +or -

Press SET

Press +

tH1F appears (Heating Period 1 Off) 05:00 default

Press SET - Hours will flash

adjust off time hours using + or -

Press SET - Minutes will flash

Adjust off time minutes using +or -

Press SET - Temperature will flash

Adjust Temperature using +or - Default if 3 degrees above on temp

Press SET

Press +

tH2o appears (Heating Period 2 On) 10:00 default

Use Red sub routine as above, if you need to make changes.

Press +

tH2F appears (Heating Period 2 Off) 10:00 default

Use Red sub routine as above, if you need to make changes.

Press +

tH3o appears (Heating Period 3 On) 17:00 default

Use Red sub routine as above, if you need to make changes.

Press +

tH3F appears (Heating Period 3 Off) 22:00 default

Use Red sub routine as above, if you need to make changes.

Press ESC.

Press ESC.



Setting the time

Press Clock the **hour** indicator begins to flash
Press + or - until the desired hour is set.
Press Clock the **minute** indicator begins to flash
Press + or - until the desired minute is set.
Press Clock the **day** indicator begins to flash
Press + or - until the desired day is set.
Press Clock to complete the process.

Adjust EMOF and EMON (collector over temp)

Press SET 4 times through password
Press SET
DT O appears
Press +
DT F appears
Press +
tHET appears
Press +
TEMP appears
Press SET
EMOF appears
Press SET
the existing value is shown (130)
Press SET
--- appears
Press ESC
to accept the change
(This function **Must** be disabled for Evacuated Tube systems)
Press +

Adjust CMX (Collector cooling function)

Press +/- until
CMX is displayed
Press SET
the existing value is shown (110)
Press SET
--- appears
Press ESC to accept the change
(This function **Must** be disabled for Evacuated Tube systems)

Adjust CFR (Collector frost protection if the manifold reaches 4 Degrees Celcius)

Press Set through password
Press +/- until
CFR is displayed
Press SET
the existing value is shown (---)
Press SET
04 is displayed
Press ESC



to accept the change

Adjust SMX (Geyser maximum temperature - in Degrees Celcius)

Press Set through password

Press +- until
SMX is displayed

Press SET
the existing value is shown (60)

Press + until
65 is displayed

Press ESC
to accept the change

